



Installation

Clean sealing surface and degreas area of housing partition

Screw special tool 119232 with screws to crankshaft

Note: support sleeve1 is supplied with crank seal 2. When crankshaft seal 2 is installed, only the support sleeve (1) may be used as a slip sleeve.

Crankshaft seal (2) has a groove on both sides.

Important!

After installation, the grooves must be filled with sealing compound.

Note: the required parts are available from All European